

This document must be retained for future reference.

It is the responsibility of the person installing the electrical equipment to ensure that the installation meets the requirements of the IET wiring regulations and is therefore 'fit for purpose'. Factors such as correct selection of components, cable sizing, protective devices and Earth bonding are all critical and should be checked prior to full testing and power-up. Any other regulations applicable to the equipment being installed such as the Machinery Directive and current health and safety legislation must also be adhered to.

All connections (including factory made) must be checked for the correct tightness prior to commissioning of the electrical installation. All connections should also be inspected periodically to ensure correct tightness.

DO NOT USE POWER TOOLS ON THESE PRODUCTS



LBF160-2003PSNME/PNLME AC-23@400V(415V) Enclosed Door Interlocked BS88 Switch Fuses


- IP65
- EN 60947-1 & 3 Compliant




Data	Range	Units	LBF1603PNLME / -NF LBF1603PSNME / -NF	LBF2003PNLME / -NF LBF2003PSNME / -NF
BS88 Fuse size	-	-	A4	B1-B2
Rated thermal current I _{th} at 40°C	Amps	A	160	200
Rated insulation voltage U _i	Volts	V	800	800
Rated dielectric strength	Volts	kV	6	6
Rated impulse voltage U _{imp}	Volts	kV	8	8
Rated operational current I _e at 400V AC-22	Amps	A	160	200
Rated operational current I _e at 400V AC-23	Amps	A	160	200
Rated operational power P _e at 400V AC-23	Watts	kW	90	110
Rated breaking capacity	Amps	A	1280	1600
Rated making capacity	Amps	A	1600	2000
Rated short circuit making current (rms) with fuses fitted	Amps	kA	80	80
Rated short circuit withstand current (rms) with fuses fitted	Amps	kA	80	80
Minimum number of mechanical operations	-	Cycles	10,000	10,000
Minimum number of electrical operations @ 400V AC-23	-	Cycles	1,000	1,000
Terminal Capacity (rigid copper cable)	-	mm ²	120	120
Lug bolt size	-	-	M8	M8
Maximum size of busbar connection	-	mm	5x25	5x25
Tightening torque	-	Nm	13	13

LBF160-2003PSNME/PNLME AC-23@400V(415V)
Enclosed Door Interlocked BS88 Switch Fuses

Enclosure Dimensions

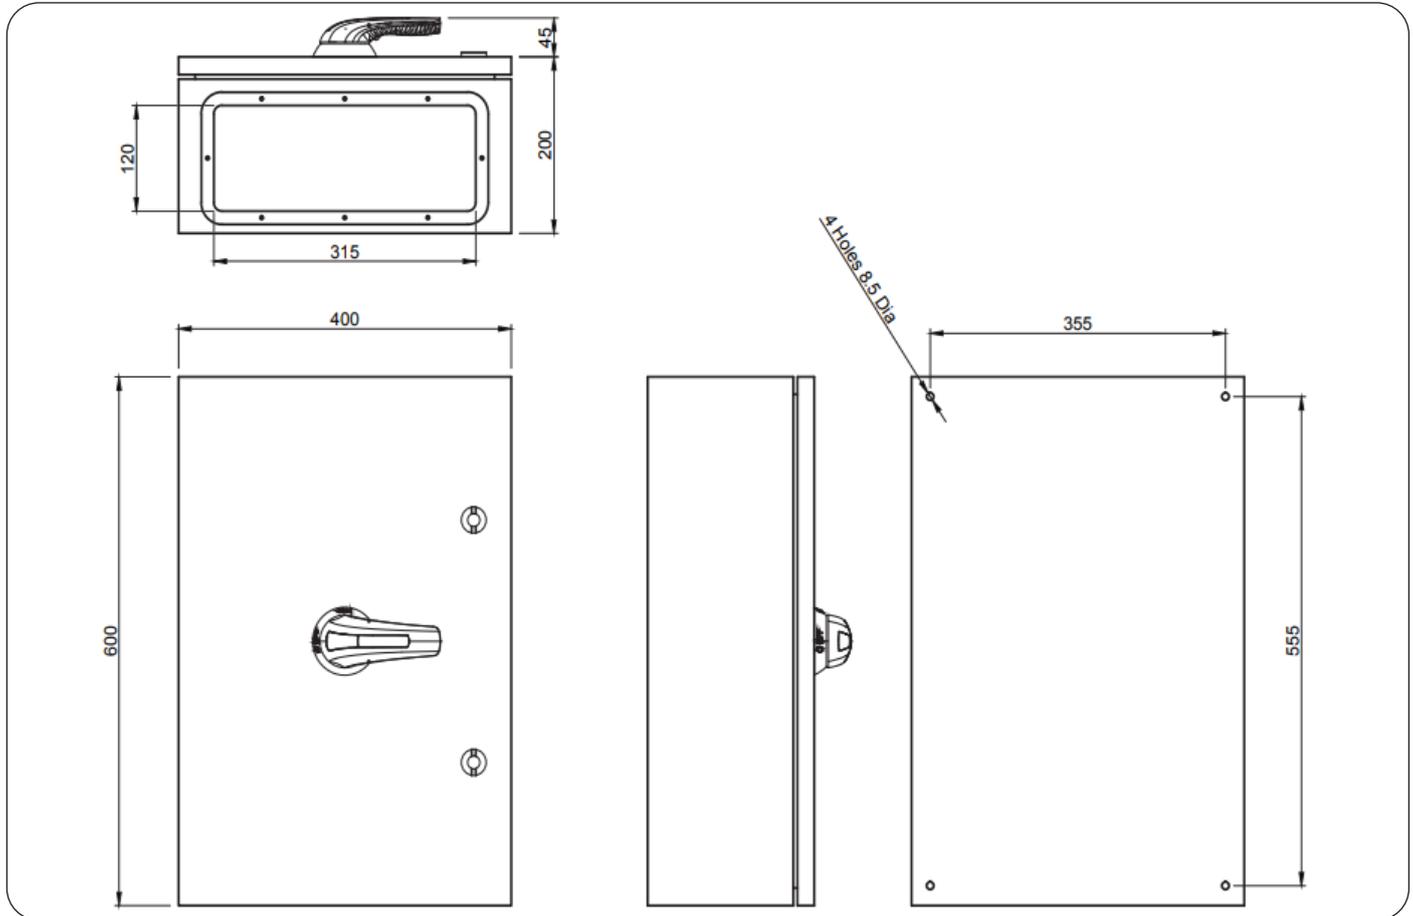


Terminal Configuration

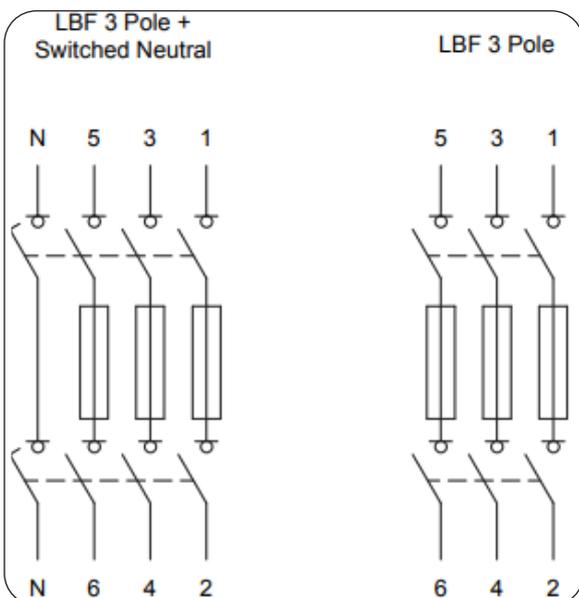

Maximum BS88 Fuse Sizes

	A	B \varnothing	D	G	H	J
Fuses	Max	Max	Max	Nom	Nom	Min
A4	70	37	111	94	8,7	9,5
B1			138	111		11
B2	77	42				

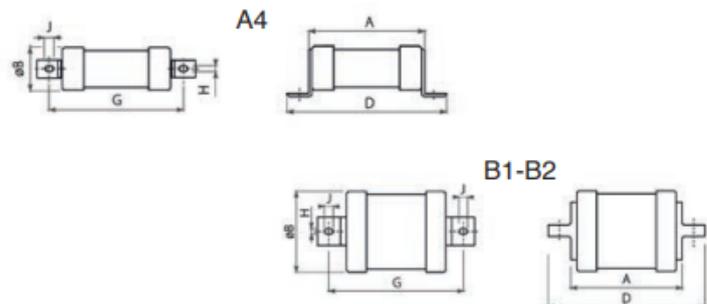


LBF160-2003PSNME/PNLME AC-23@400V(415V)
Enclosed Door Interlocked BS88 Switch Fuses





Handle Assembly:

1. Ensure that the handle is in the off position and locate the handle on to the door with the handle showing the off position at 9 o' clock
2. Tighten the four M5, flange nuts to 1.5Nm

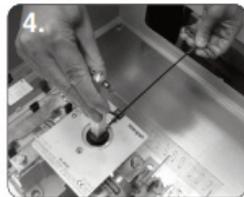

Shaft Assembly:

3. Ensure that the switch is in the off position and fully insert the shaft into the switch with the cross pin in a horizontal position
4. Tighten the M5 shaft grub screw to 1.2Nm using a 2.5mm A/F allen key

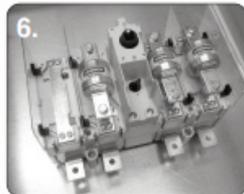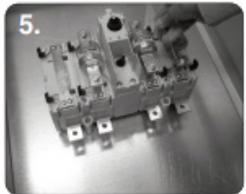


**Fuse Shroud Assembly:
(SWITCH FUSE ONLY)**

- 5/6. Install the four upright shrouds into the corresponding clips
7. Install fuse shroud into the corresponding clips



Padlock Operation

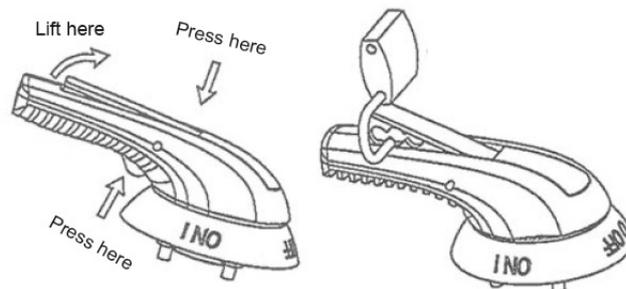

**Door Interlock Defeat Mechanism (For Authorised Personnel Only);
WARNING! ACCESS TO LIVE PARTS**

- Ensure that the door is closed and the handle is in the on position
- Locate the hole on the right side of the handle, then push and hold a small pin into the hole to activate the defeat mechanism
- The door can now be opened in the on position. Remove pin and close the door to reset the mechanism

